

## RHE 27/28



Mass Flow Meter  
Transmitter

### RHM



Mass Flow Meter Sensor

### ARHE-C4

Sensor - Transmitter  
Interconnecting Cable

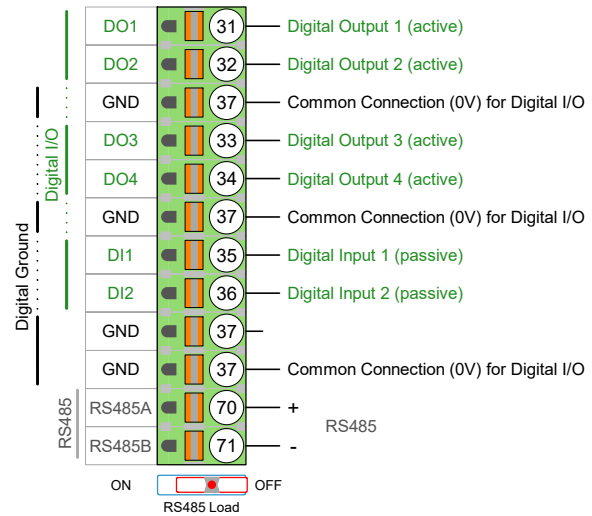
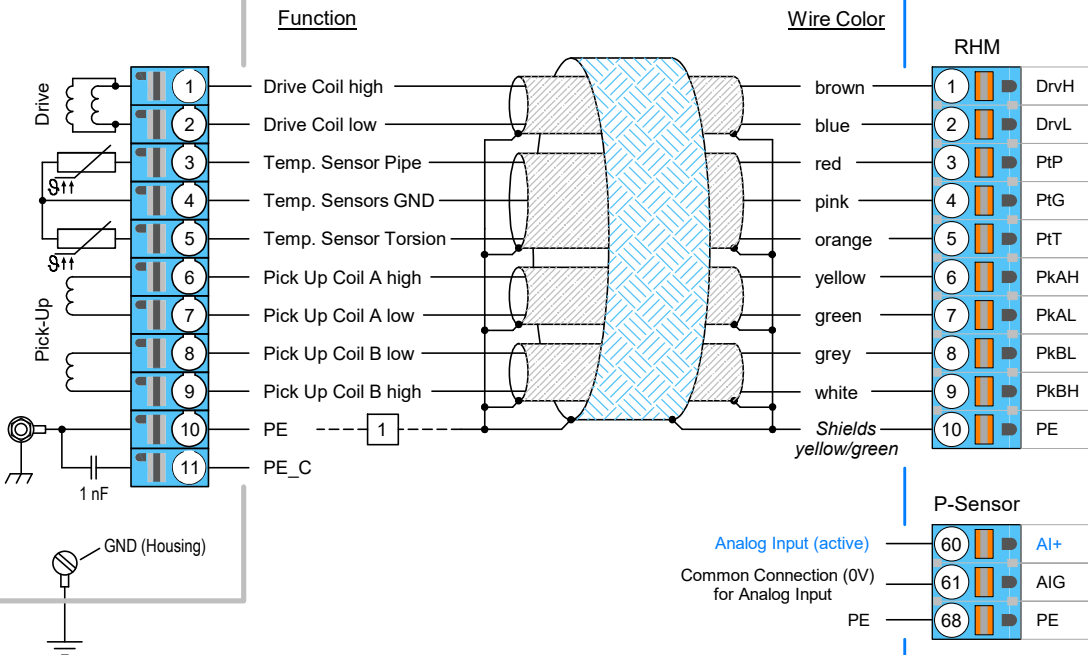


Functions programmable

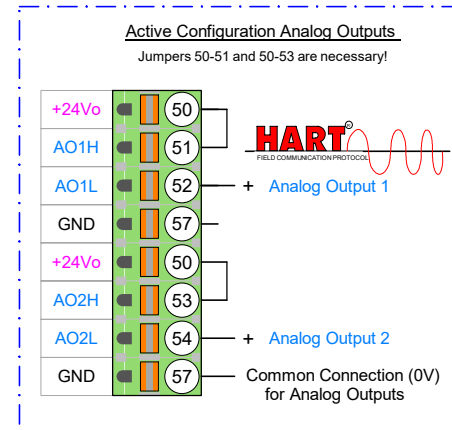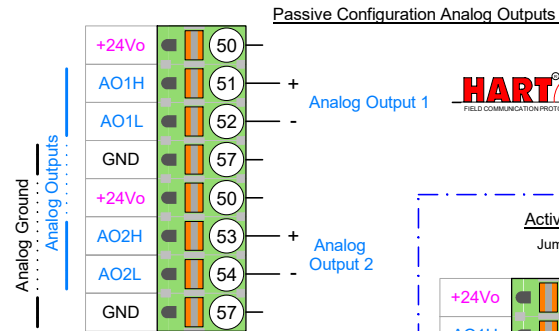

1 Best protection against electromagnetic interference is achieved by connection of the cable screens to PE.  
For special cases with longer cables and small differences in earth potential between RHM and RHE installation the screens can be connected to PE\_C. In case of substantial potential differences a potential equalization cable is mandatory.

When connecting the sensor and transmitter the respective local code for electrical installations must be considered.  
Beware that there might be additional considerations for installation in hazardous areas.  
 Do not open the RHE housing under power.

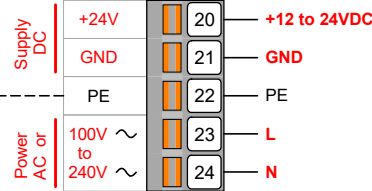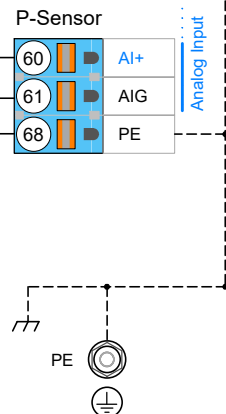

created / revised	
Date	16.02.2021
Drawn	H.G.Rudolph
Appr.	M. Weber



## Wiring diagram RHE 27 /28

RHE27 /28-\*\*\*\*\_\*\*CH-\*\*\*\*\_\*\*\*

Project	
Customer	
Draw. - Rev.	E27_28W-E_CH_Rev_1_1
Sheet	1 / 1