





ARHE-C4
Sensor - Transmitter
Interconnecting Cable
(only for remote installations)

RHM
Mass Flow Meter Sensor

Function Wire Color

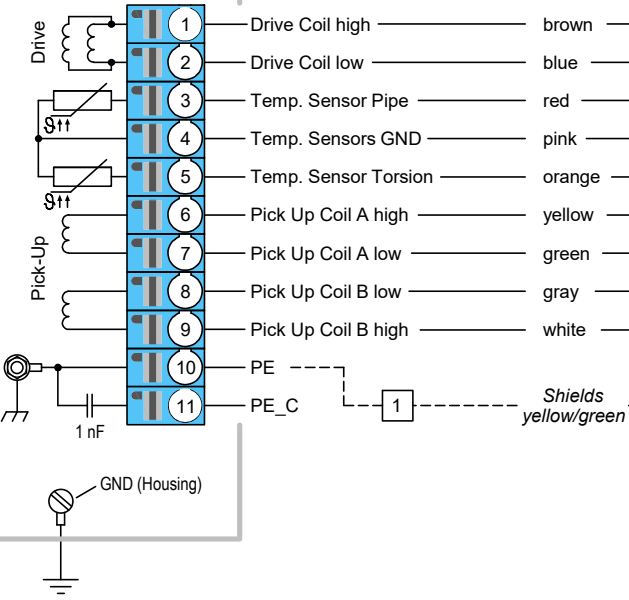

RHE 42
Transmitter

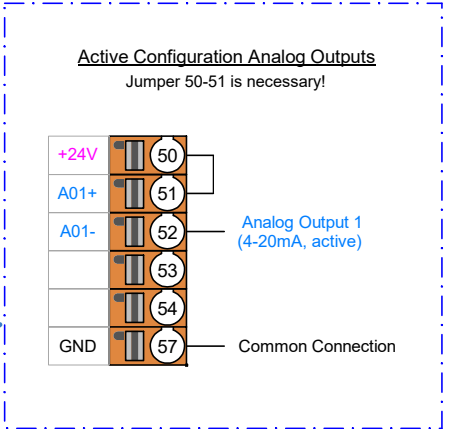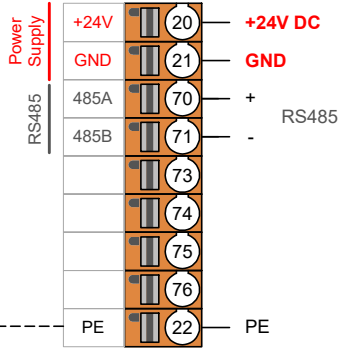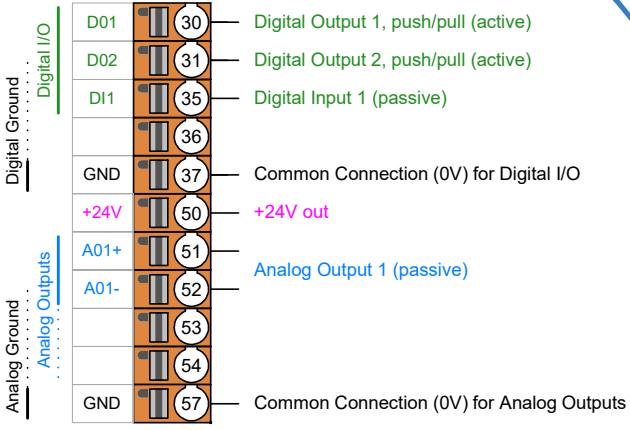

1 Best protection against electromagnetic interference is achieved by connection of the cable screens to PE.
For special cases with longer cables and small differences in earth potential between RHM and RHE installation the screens can be connected to PE_C. In case of substantial potential differences a potential equalization cable is mandatory.

When connecting the sensor and transmitter the respective local code for electrical installations must be considered.
Beware that there might be additional considerations for installation in hazardous areas.
 Do not open the RHE42 under power.

created / revised	
Date	23.02.2021
Drawn	H.G.Rudolph
Appr.	M. Weber



Wiring Diagram RHE42 (non is)
RHE42-****-**S1-****-***

Project	
Customer	
Draw. - Rev.	E42W-E_S1_Rev_1_0
Sheet	1 / 1